

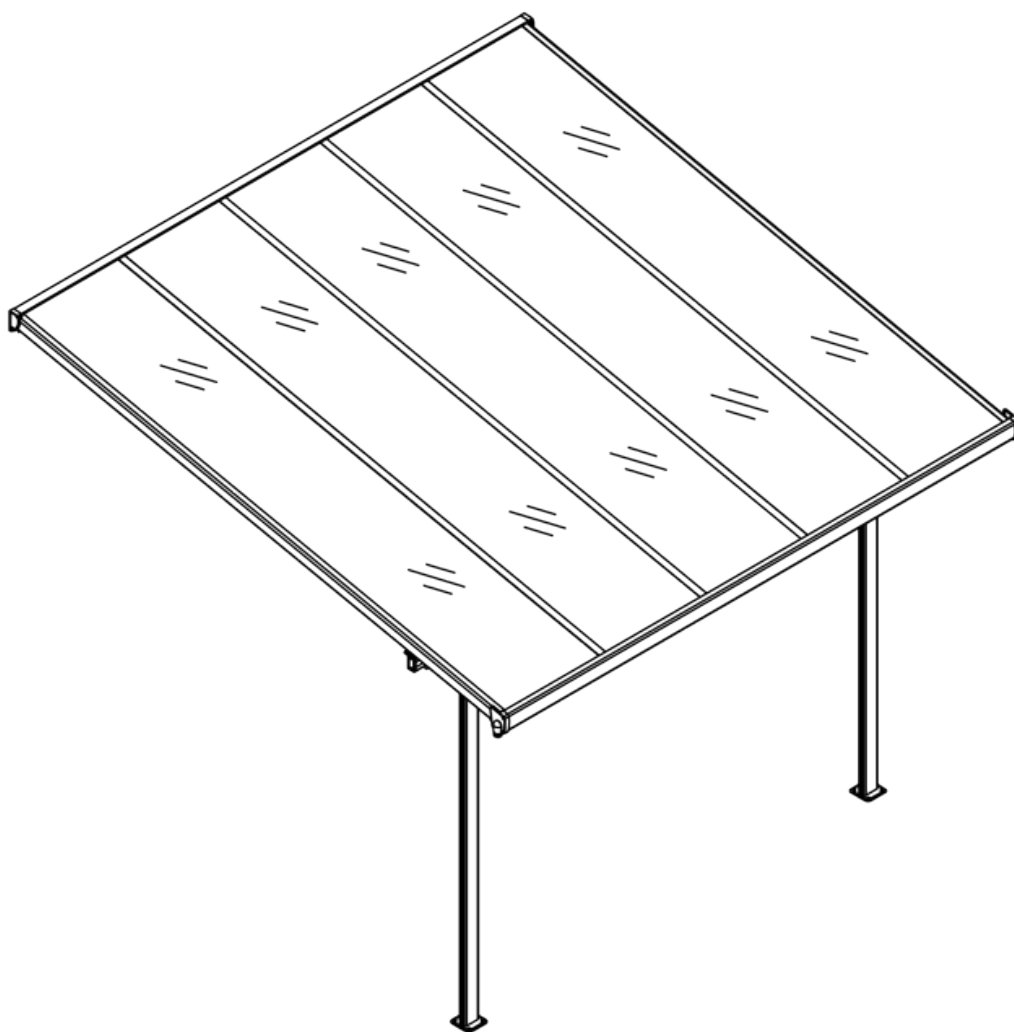
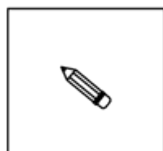
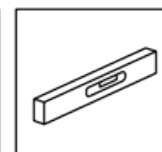
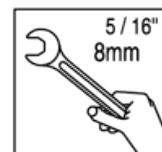


Terasový prístrešok

Návod na montáž ATLANTA 10,3 x 10

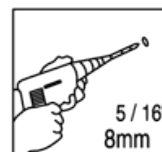


x2

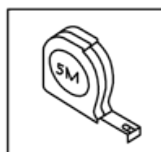



Silikón






ATLANTA rozmer 10,3 x 10

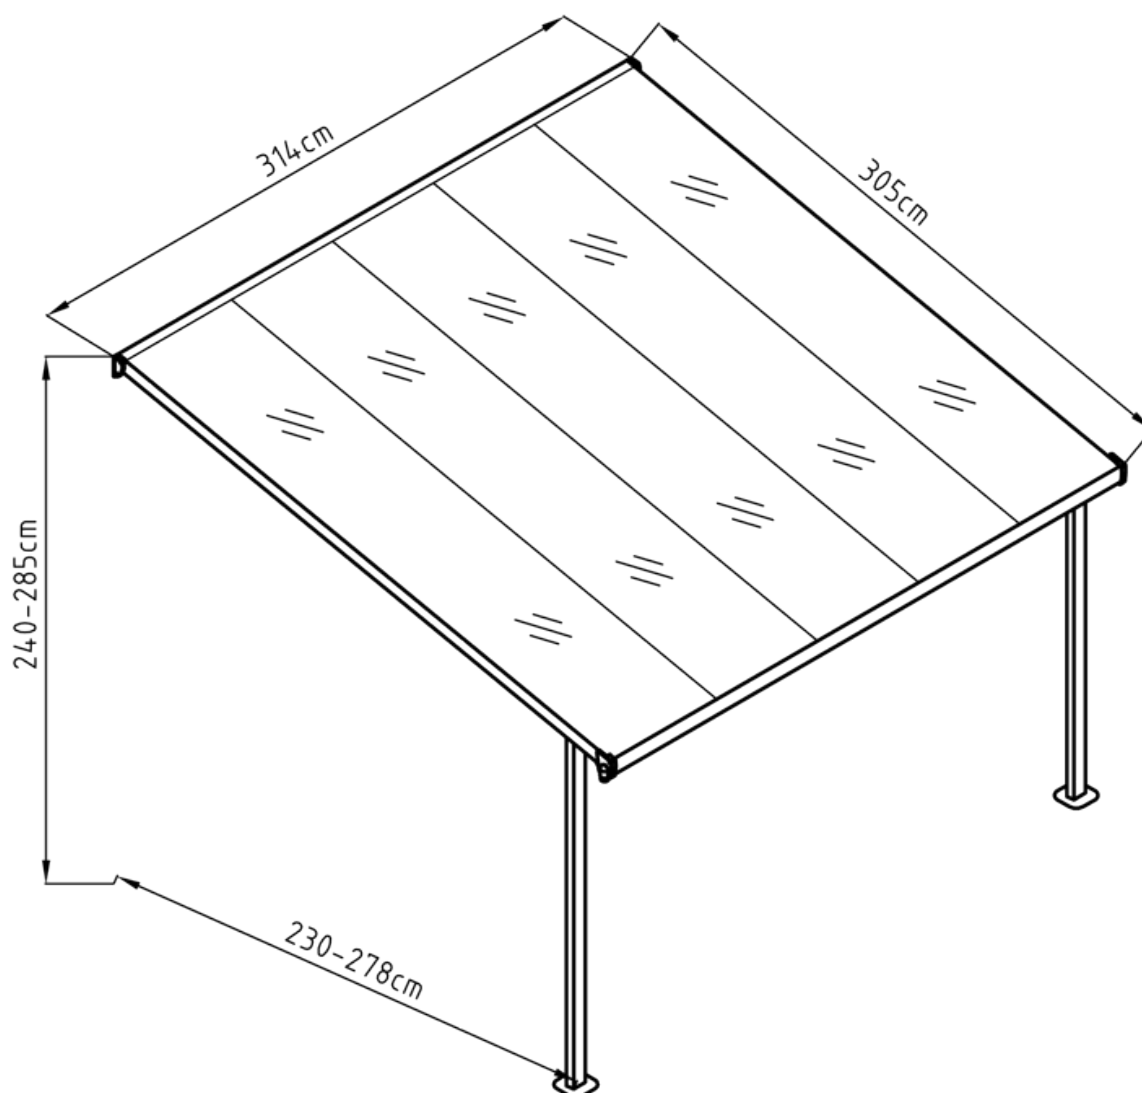


Požadovaná základná plocha

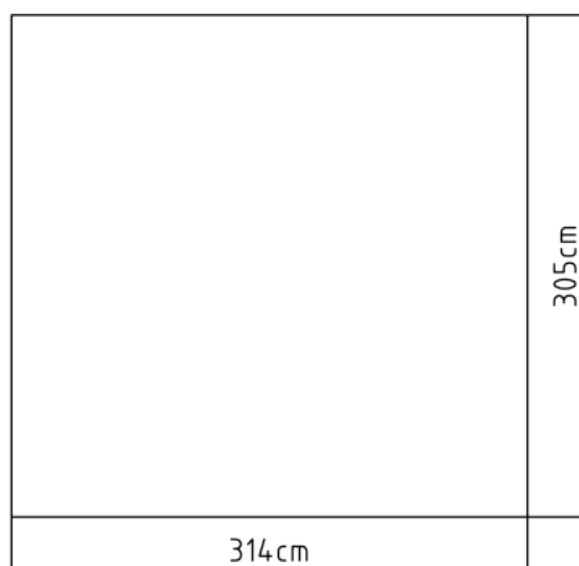

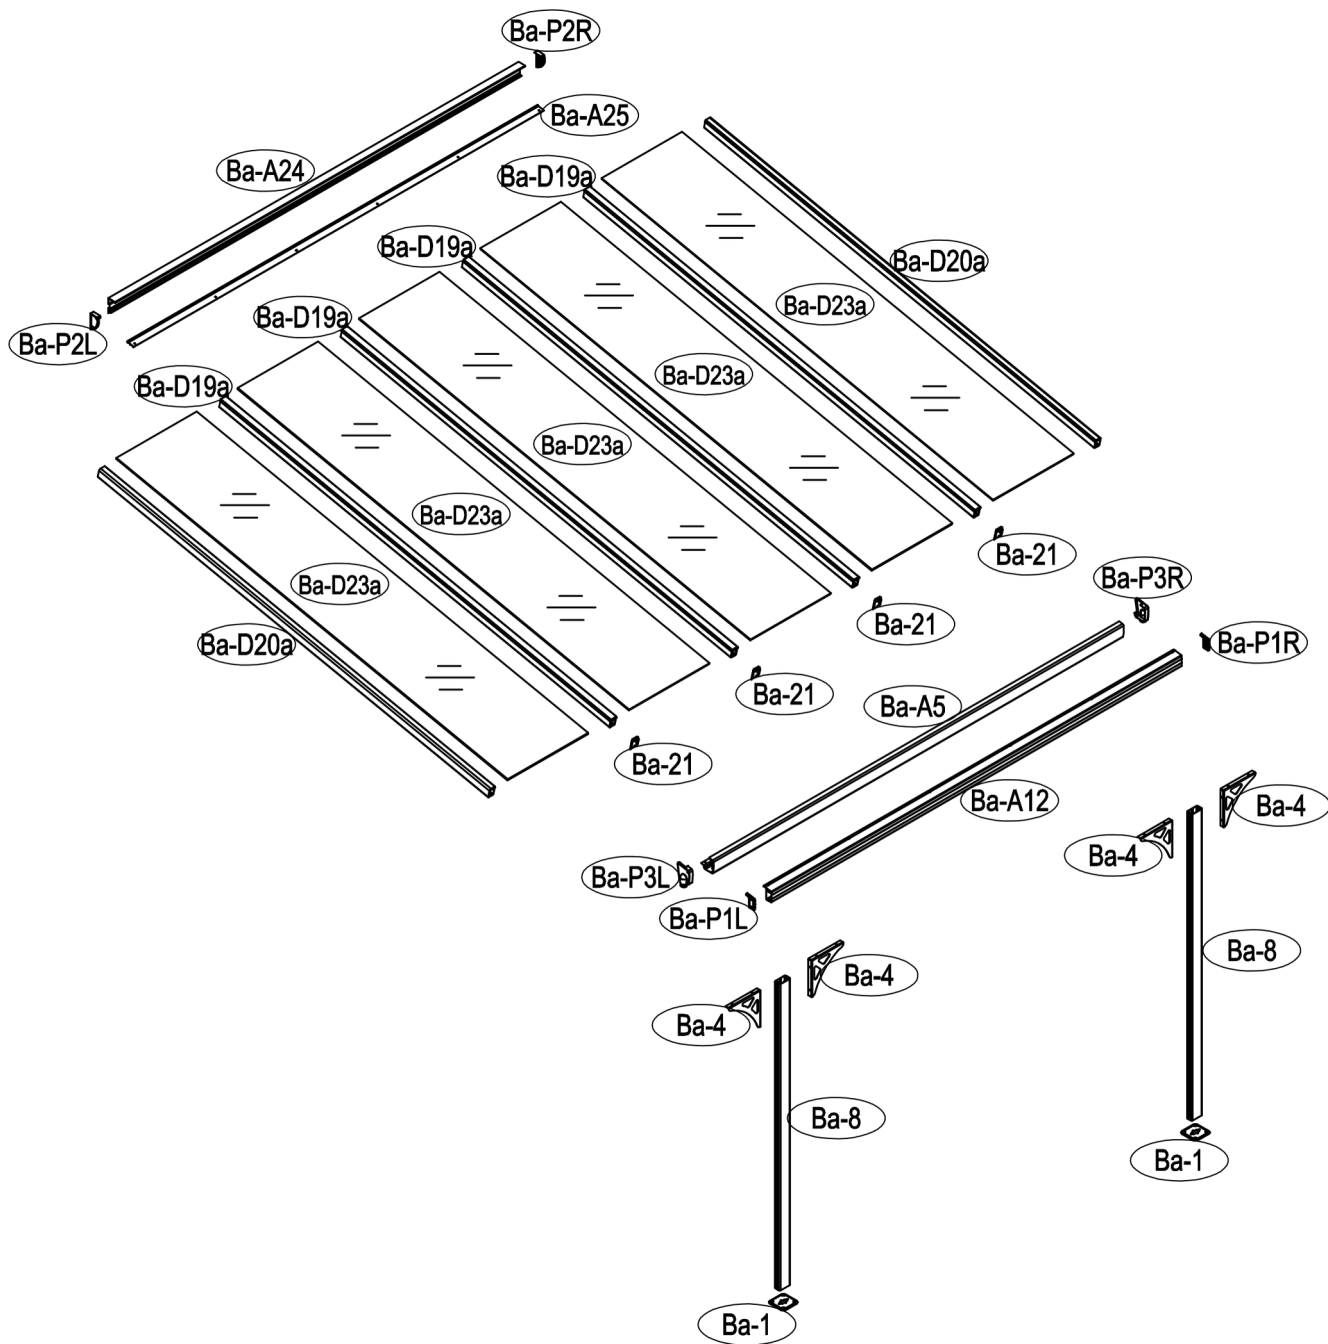

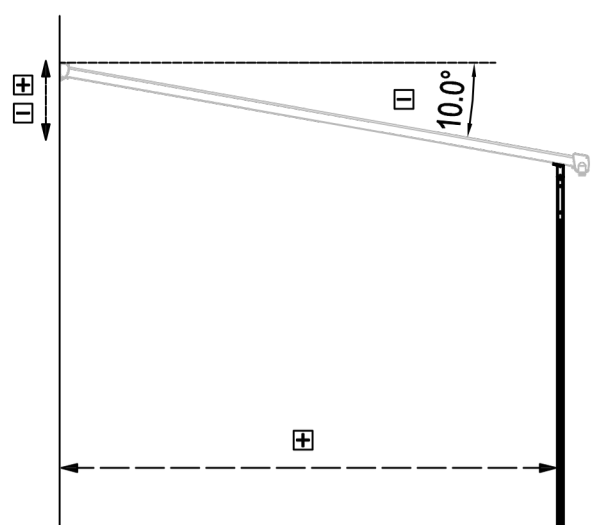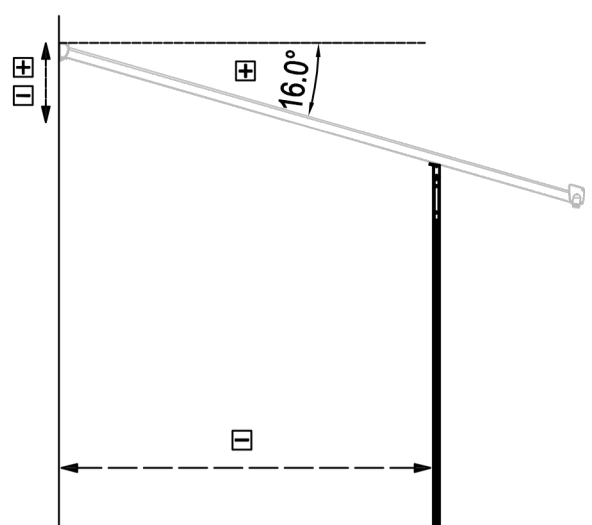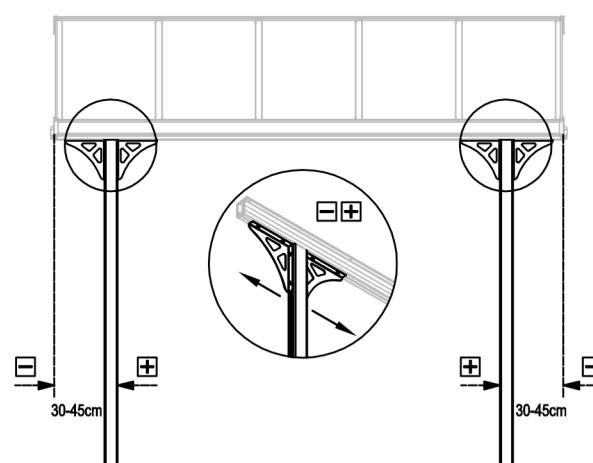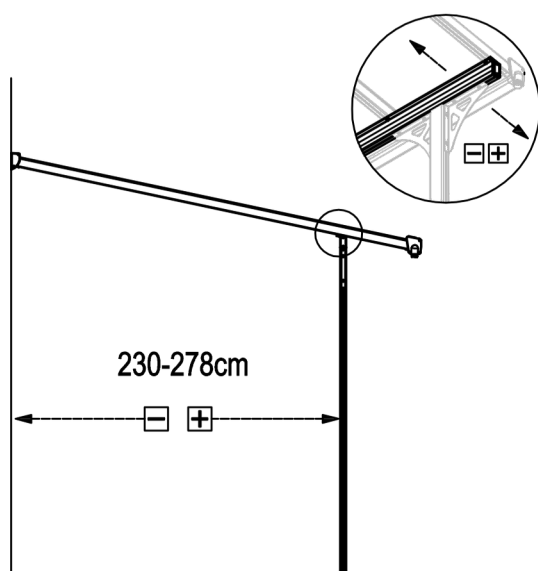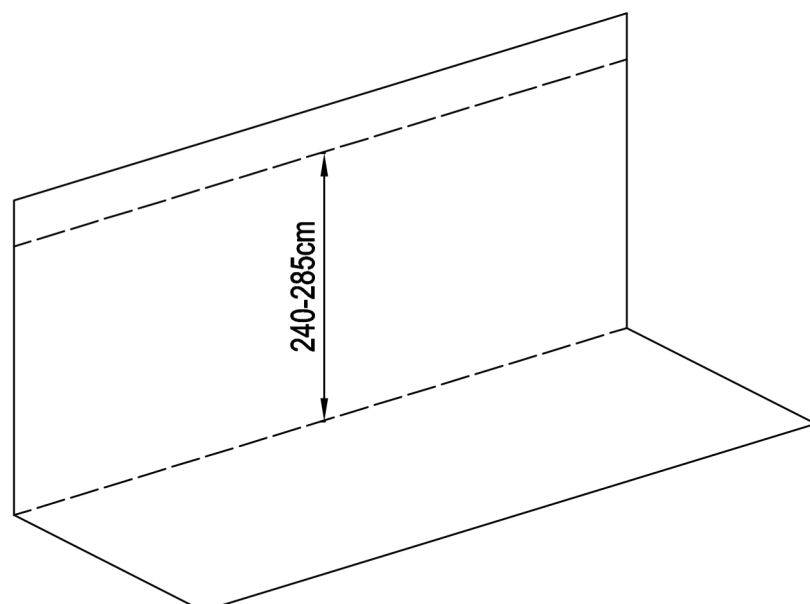


1

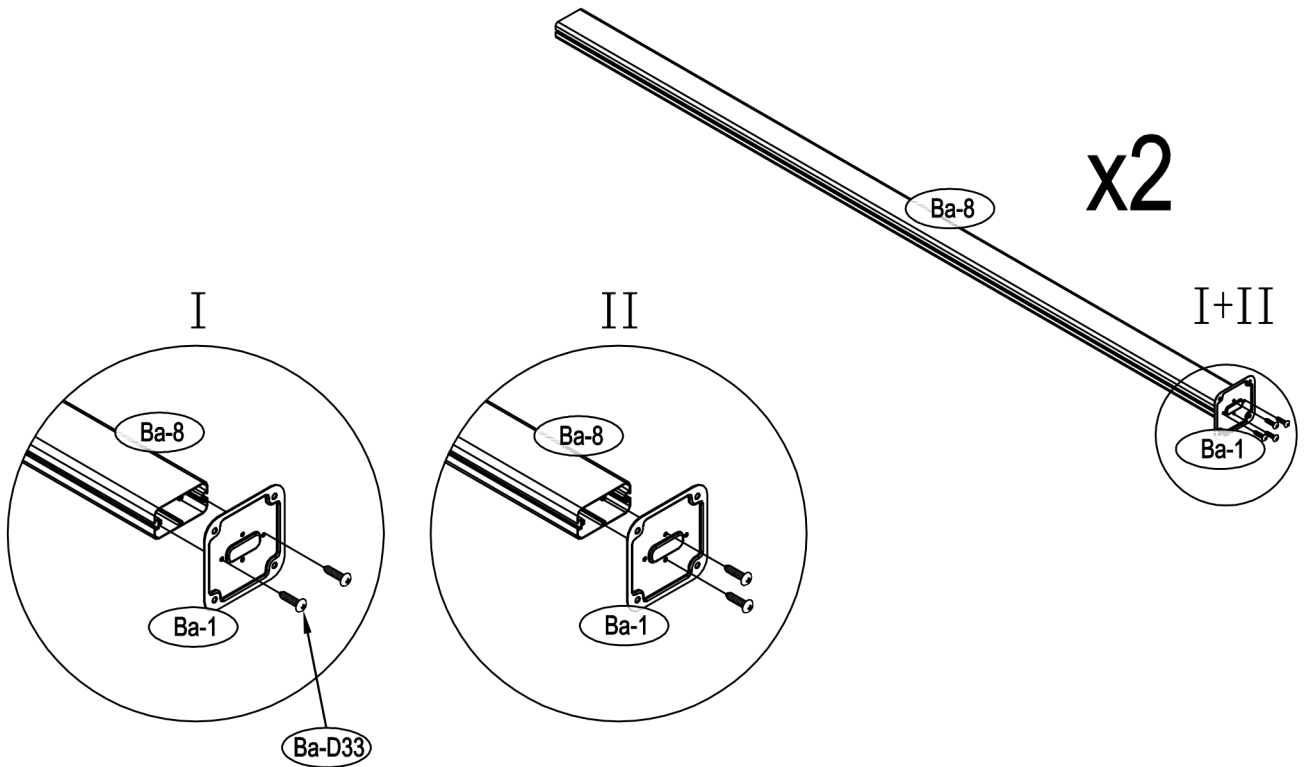

Ba-1		x2
Ba-8		x2
Ba-D33		x8

2

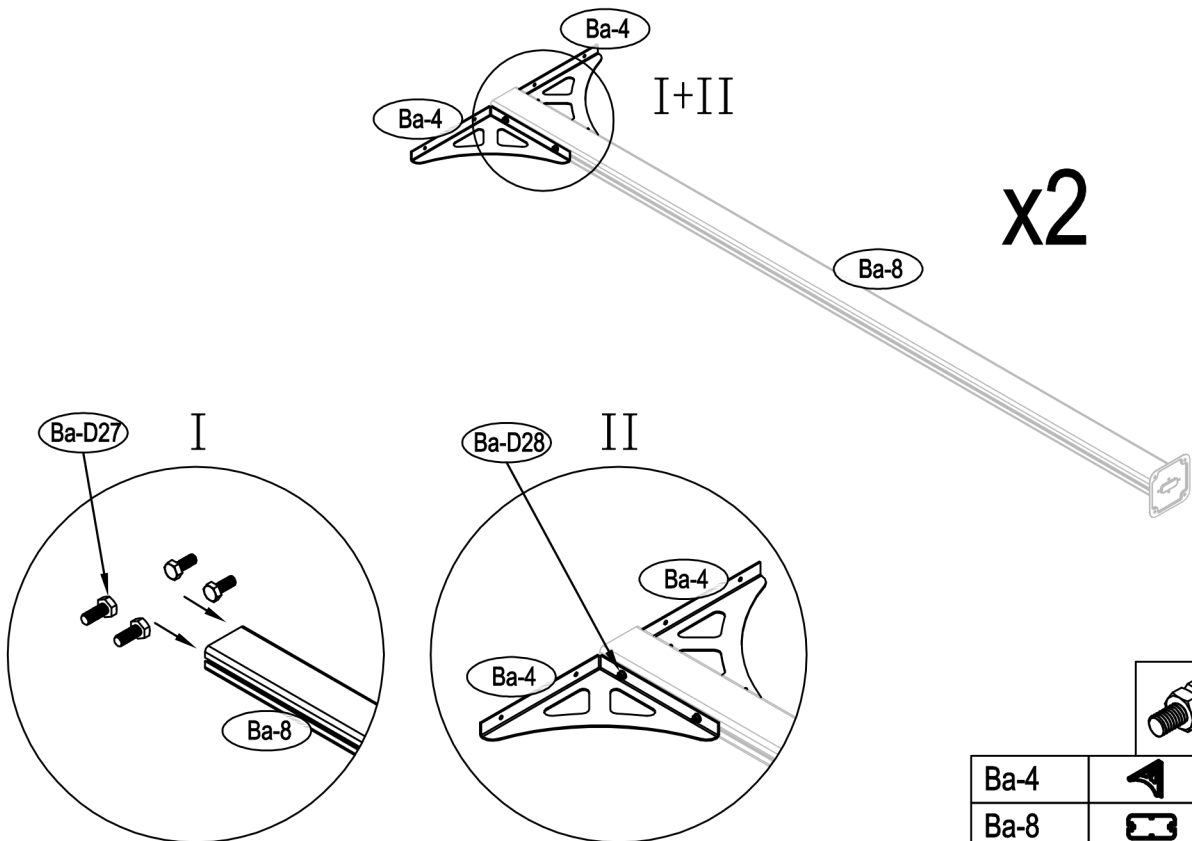


Ba-4		x4
Ba-8		x2
Ba-D27		x8
Ba-D28		x8

1




3

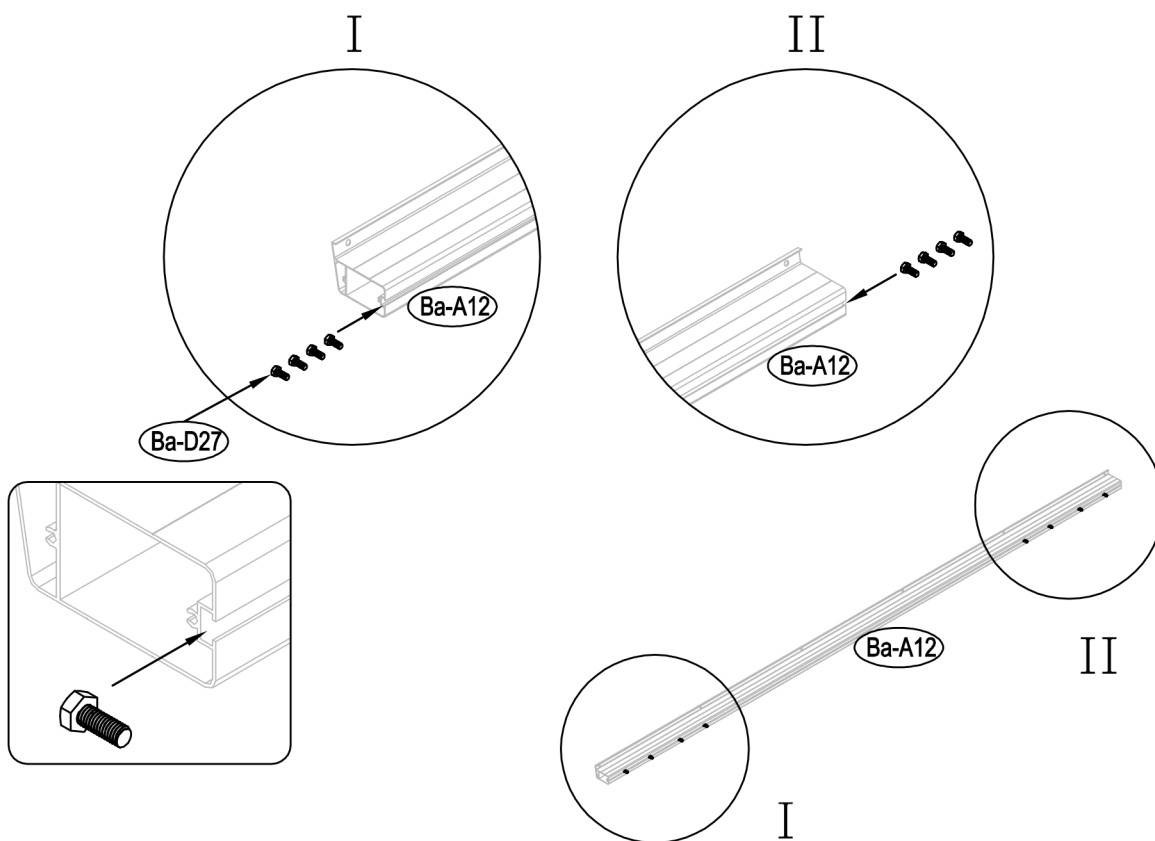

Ba-A12		x1
Ba-D27		x8

4

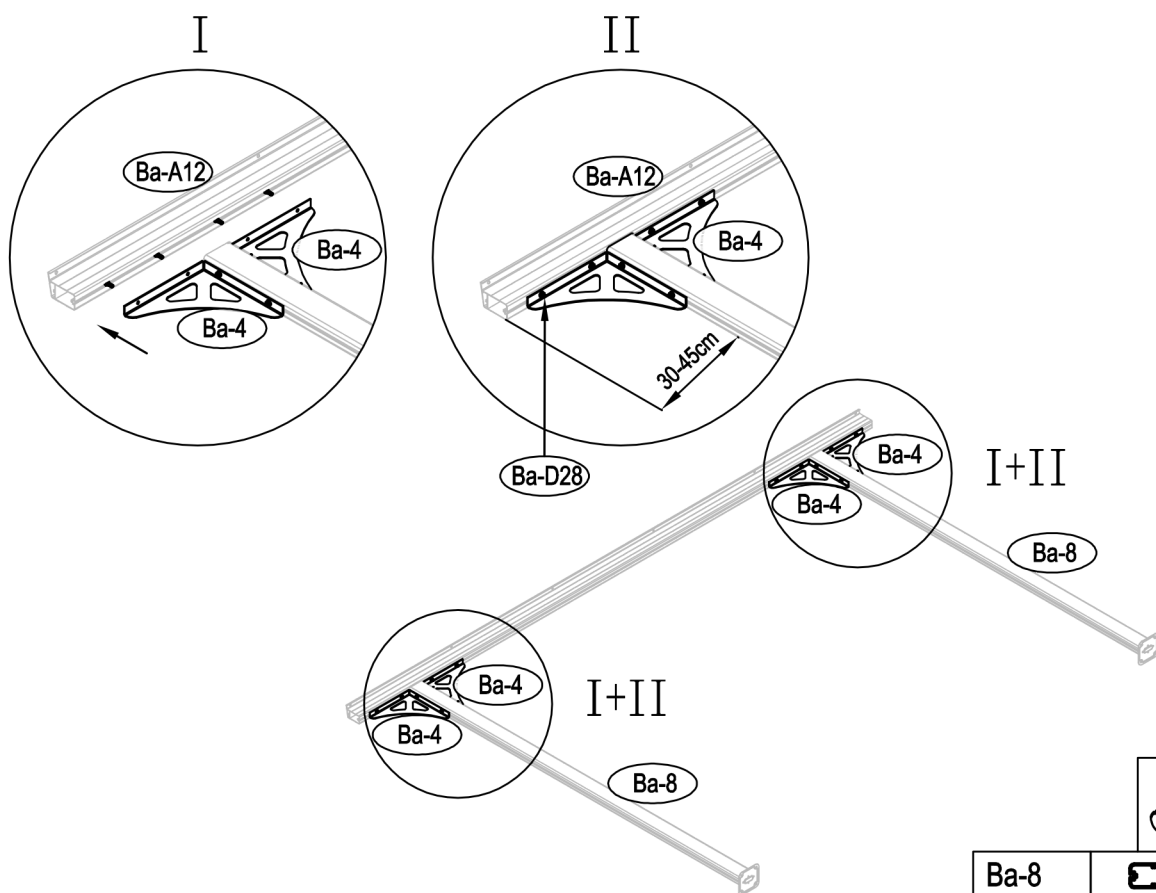


Ba-8		x2
Ba-D28		x8

2




5

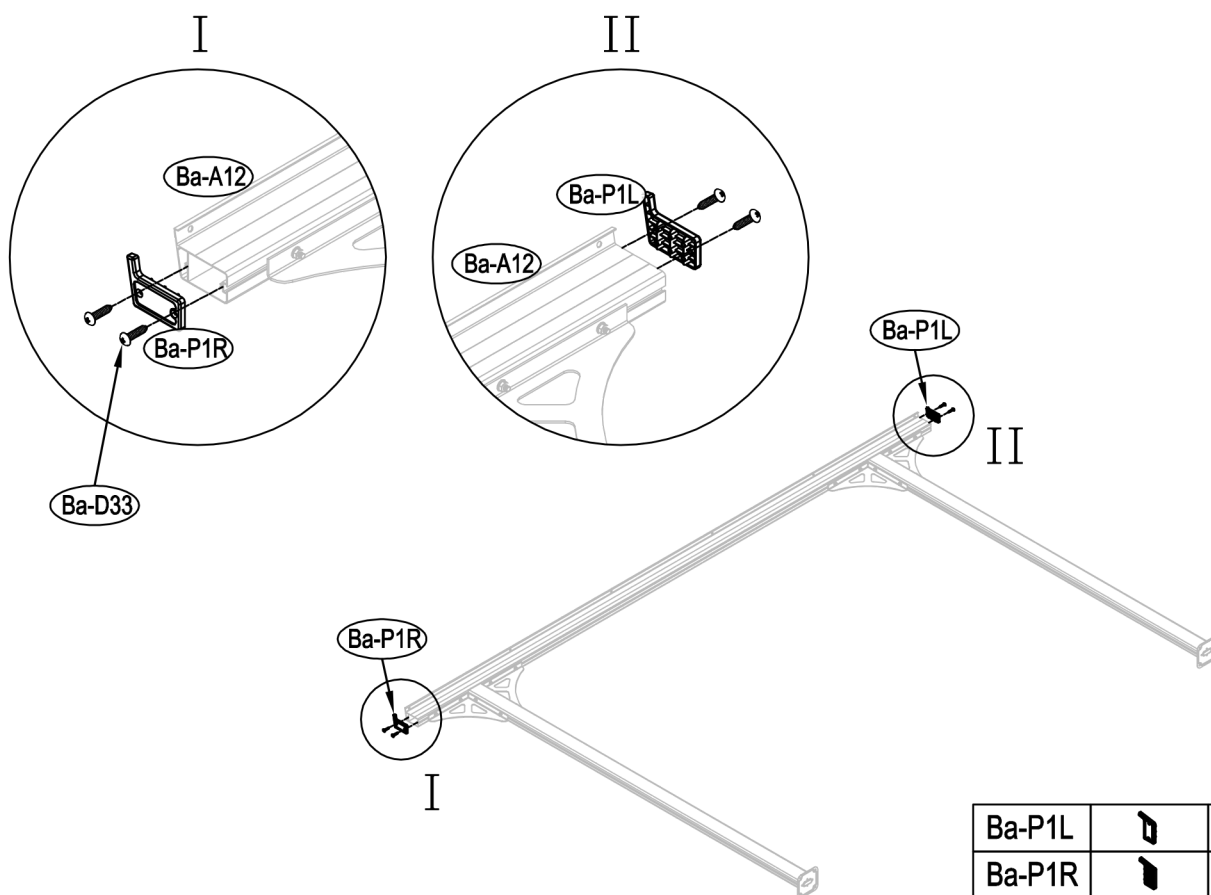

Ba-P1L		x1
Ba-P1R		x1
Ba-D33		x4

6



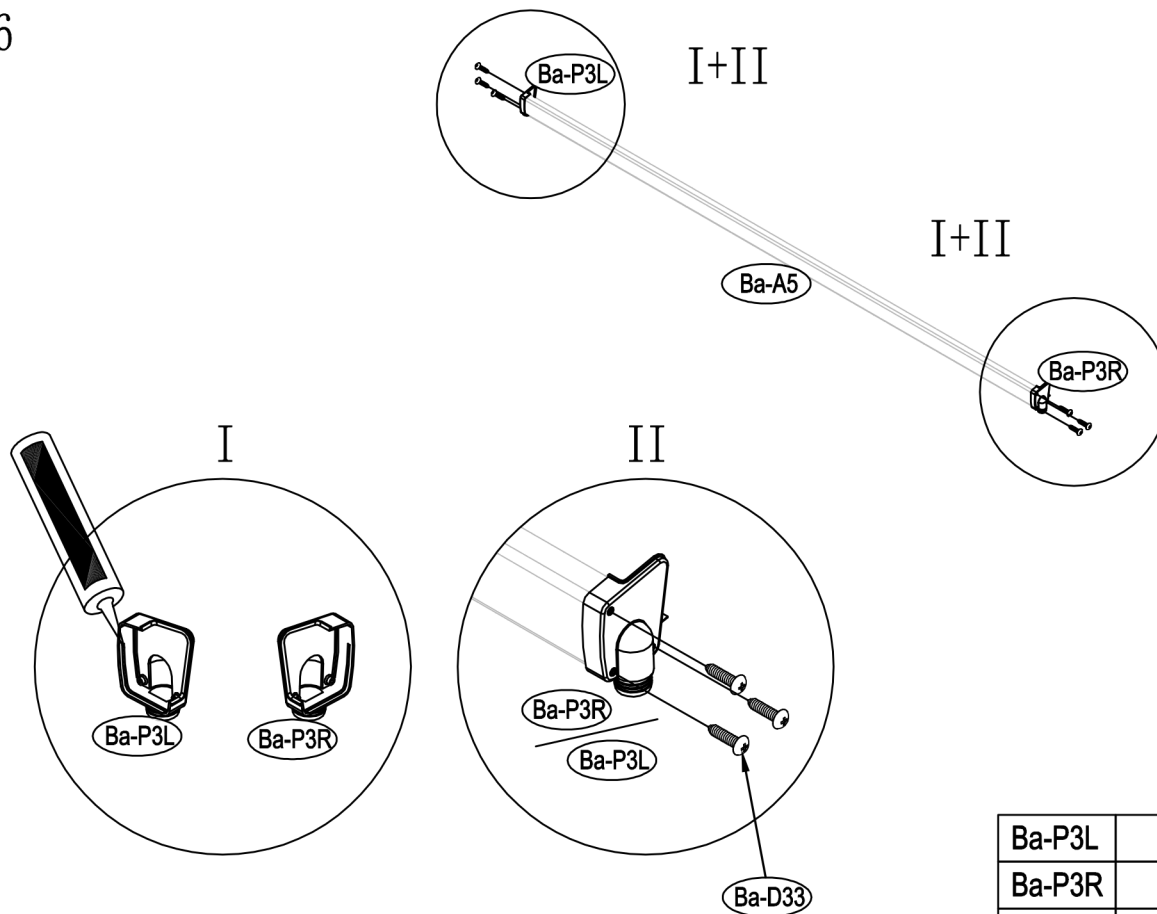


Ba-P3L		x1
Ba-P3R		x1
Ba-D33		x6

3



7


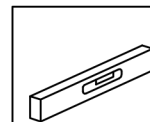
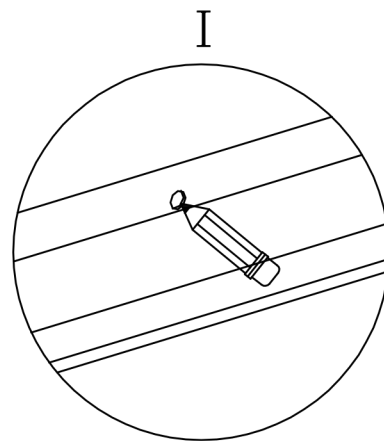
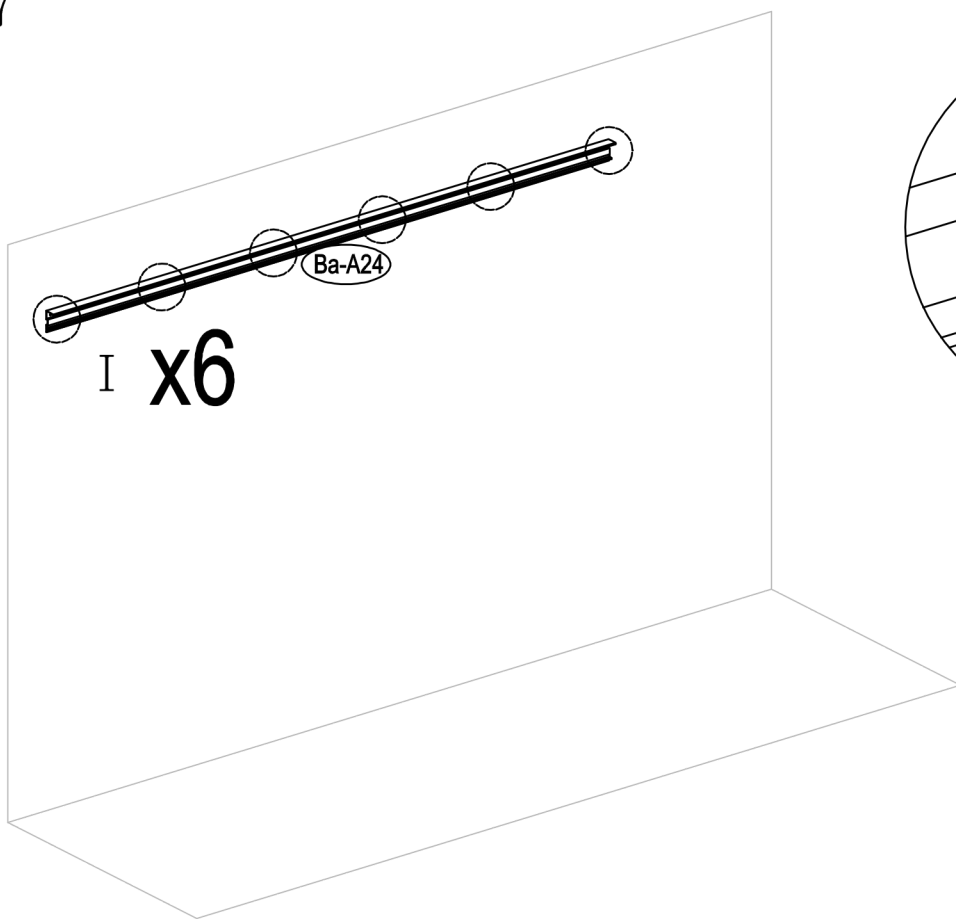


Ba-A24



x1

8

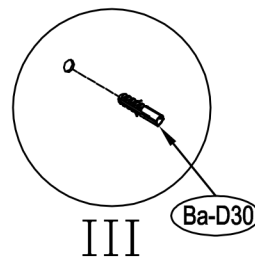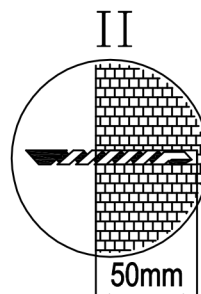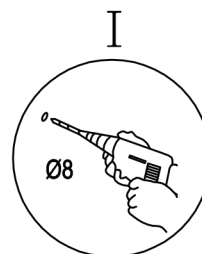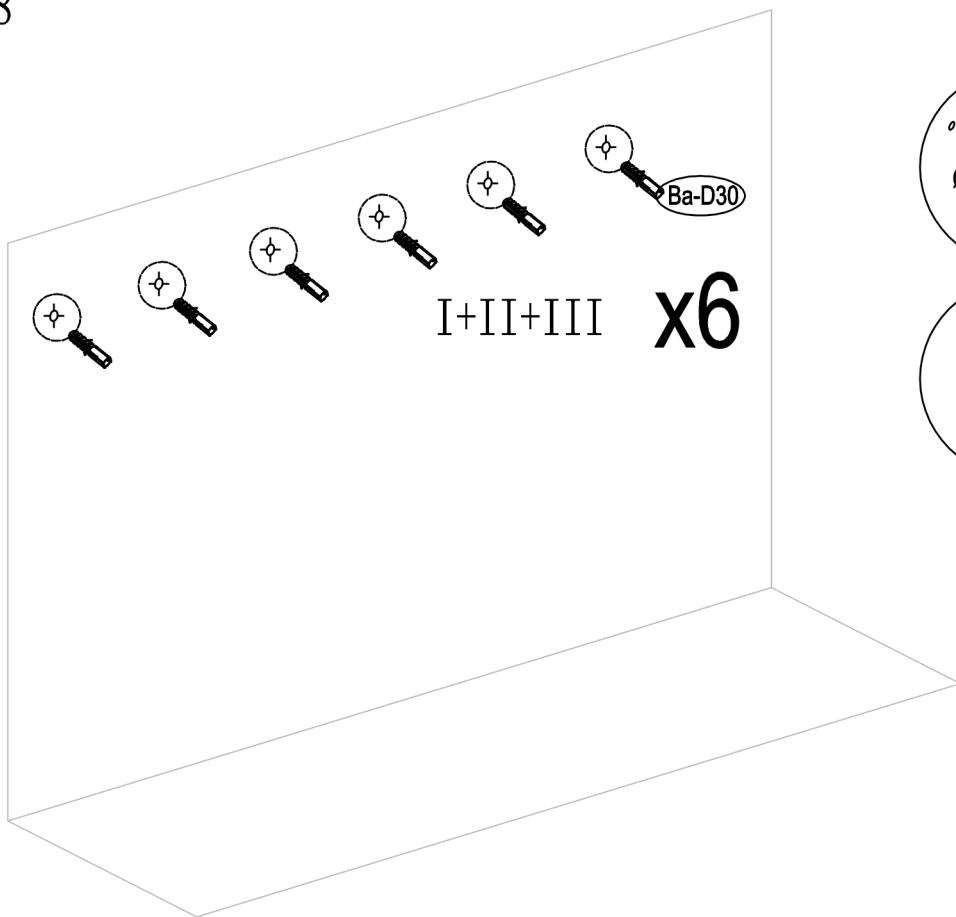

Ba-D30




x6

4




9

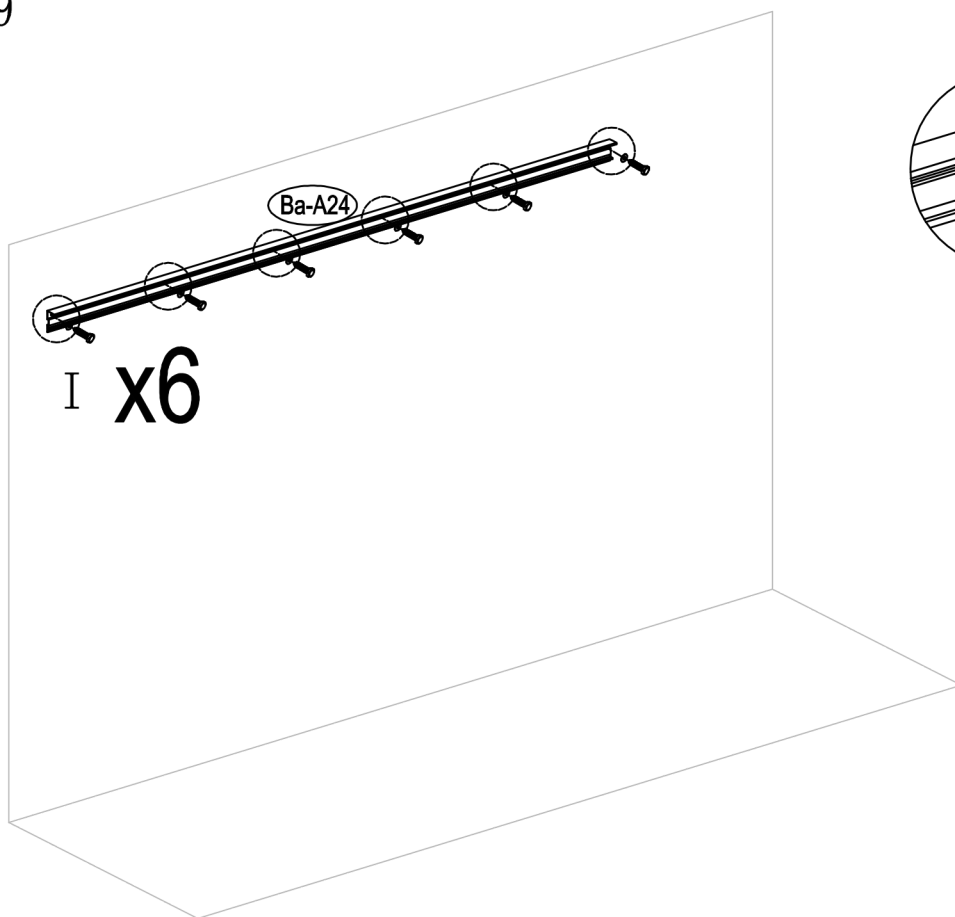

Ba-A24		x1
Ba-D31		x6
Ba-D32		x6

10



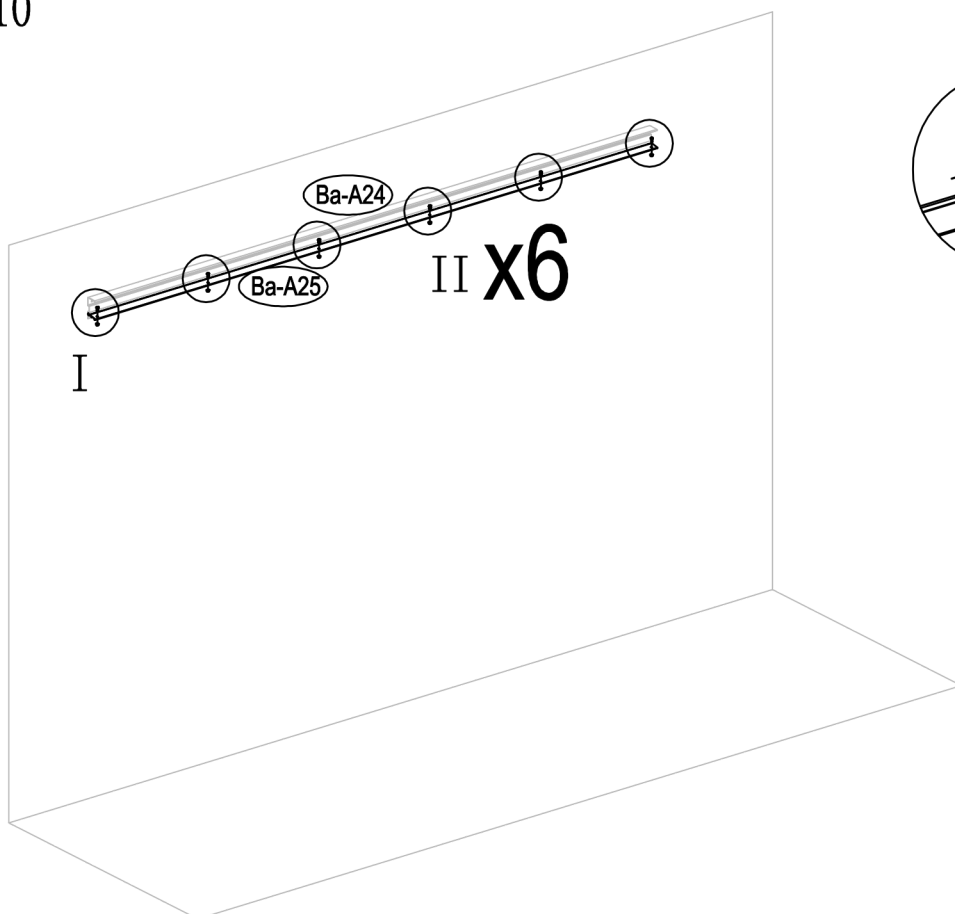


Ba-D27		x6
Ba-D28		x6

5






11

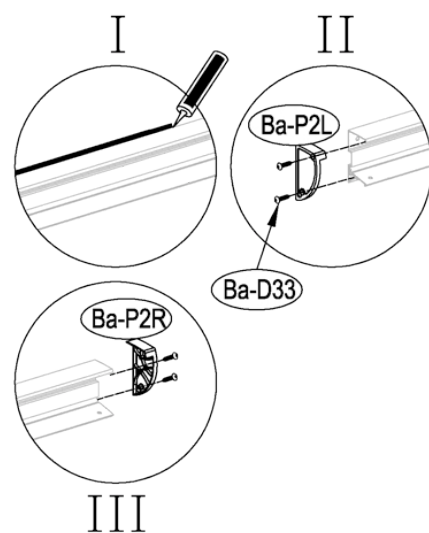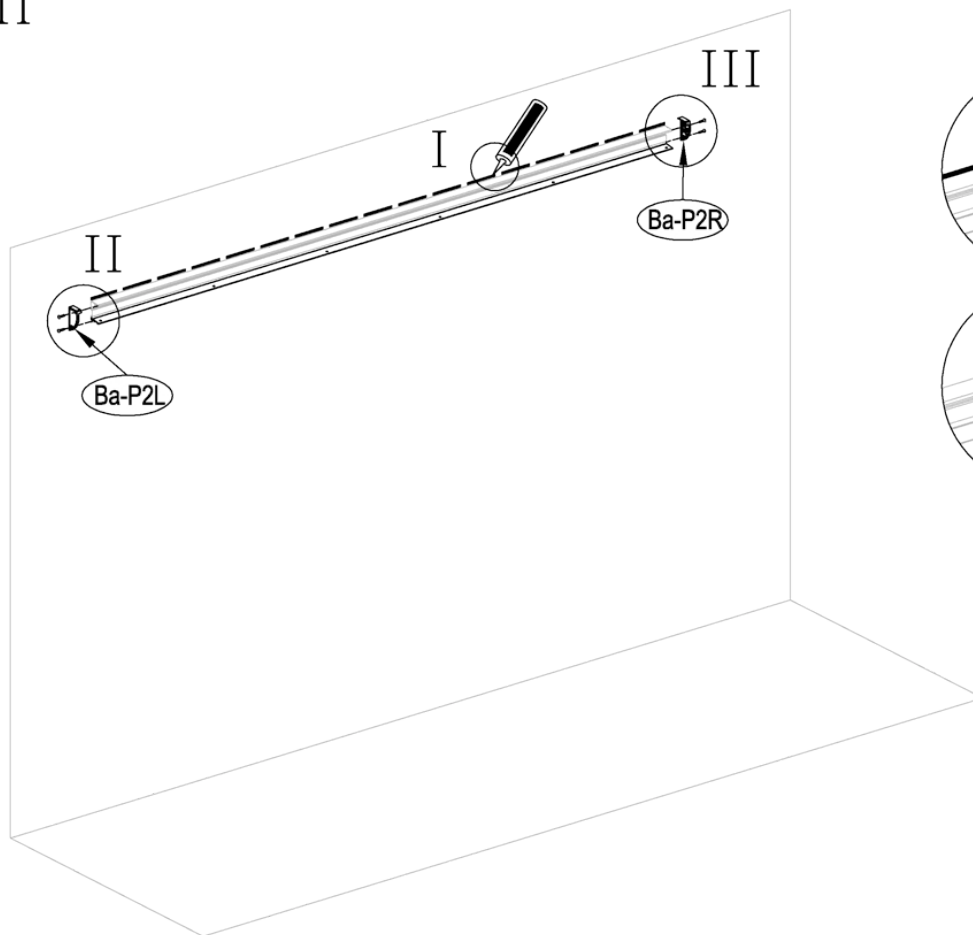

Ba-P2L		x1
Ba-P2R		x1
Ba-D33		x4

12

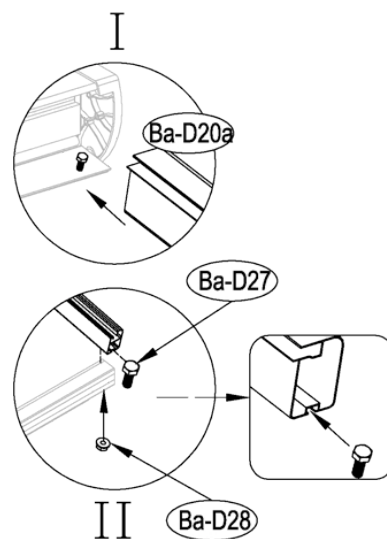
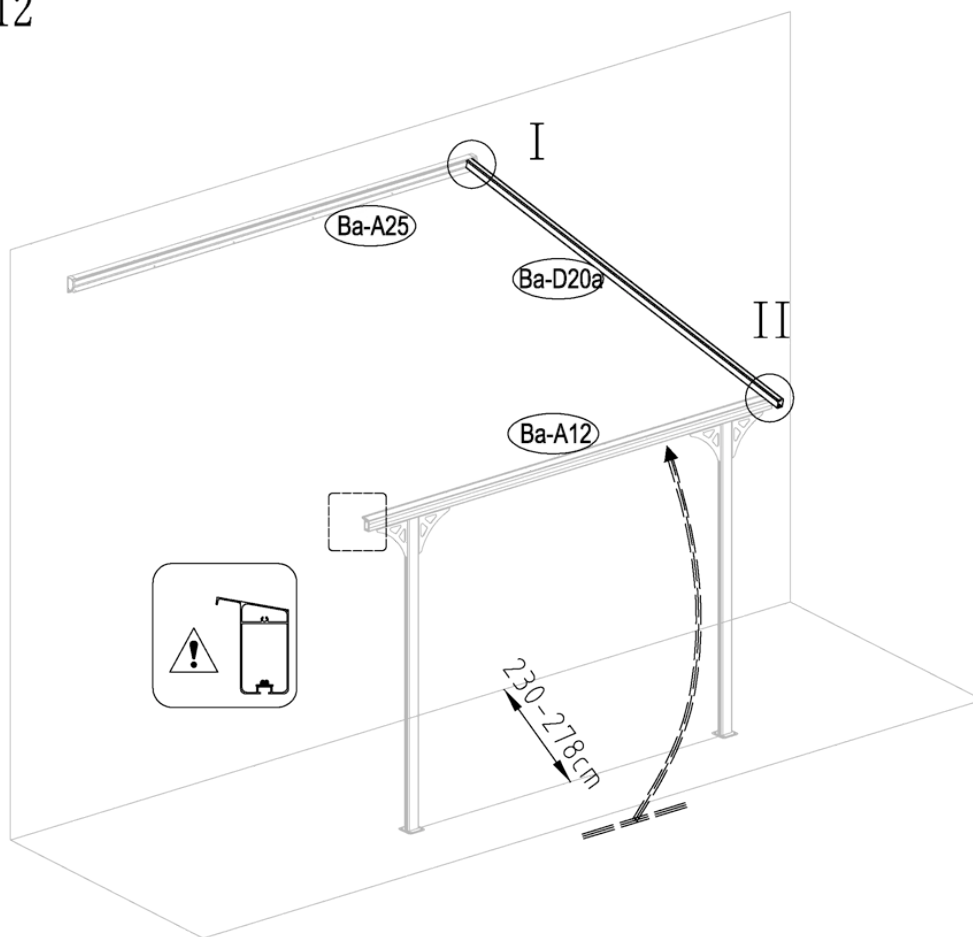


Ba-D20a		x1
Ba-D27		x1
Ba-D28		x1

6





13

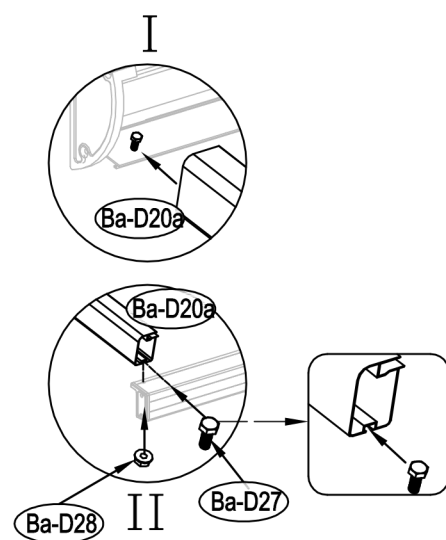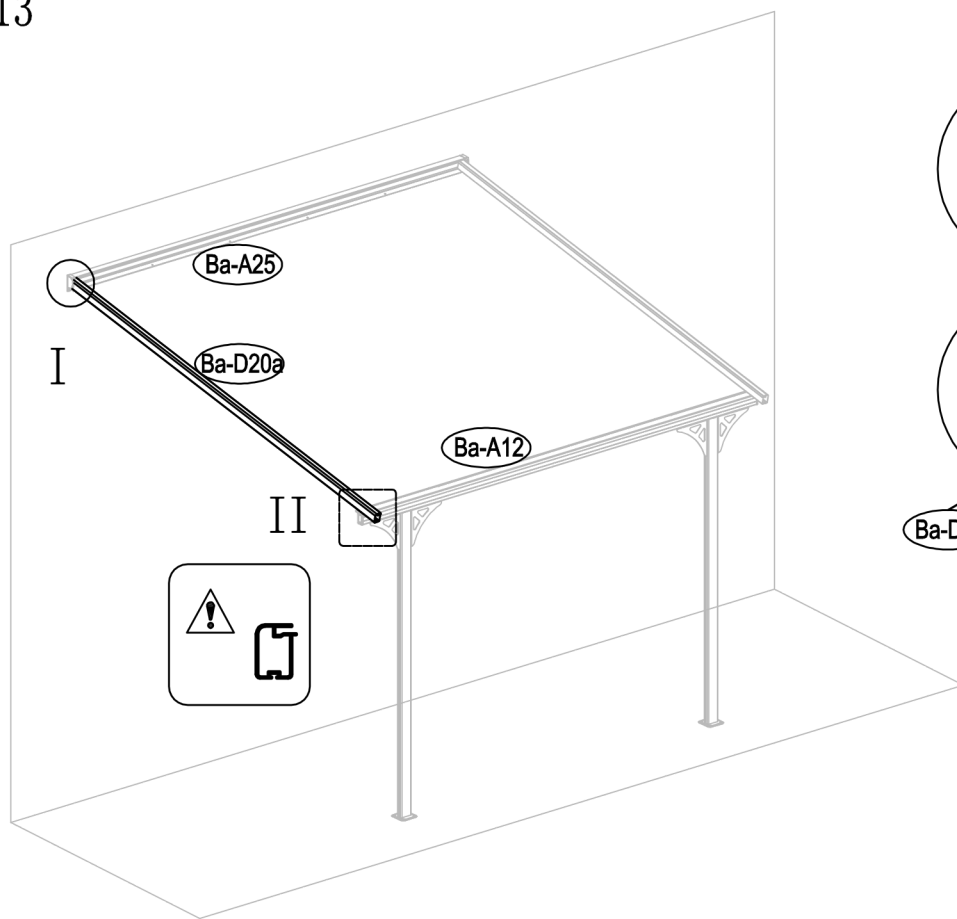

Ba-D20a		x1
Ba-D27		x1
Ba-D28		x1


14

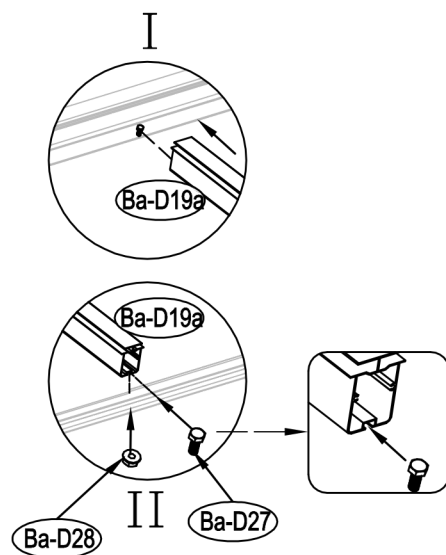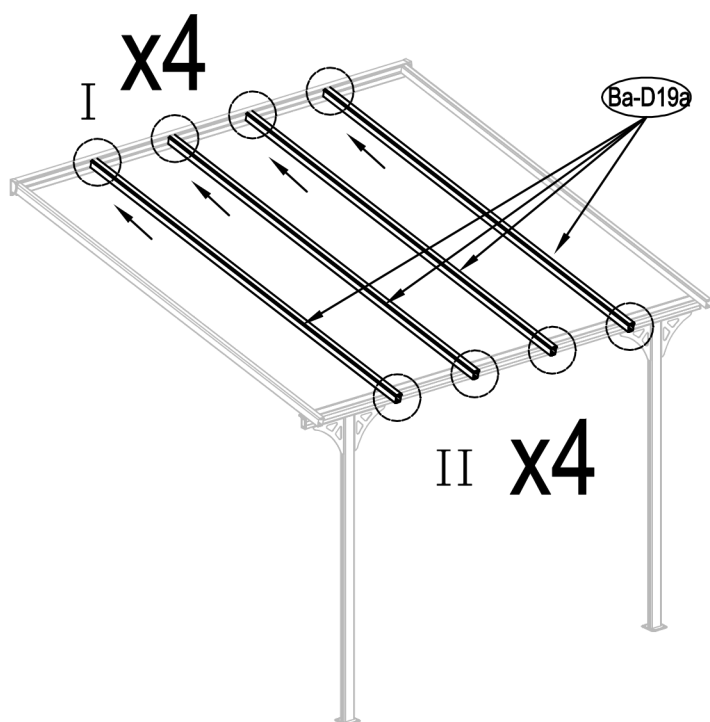

Ba-D19a		x4
Ba-D27		x4
Ba-D28		x4



15


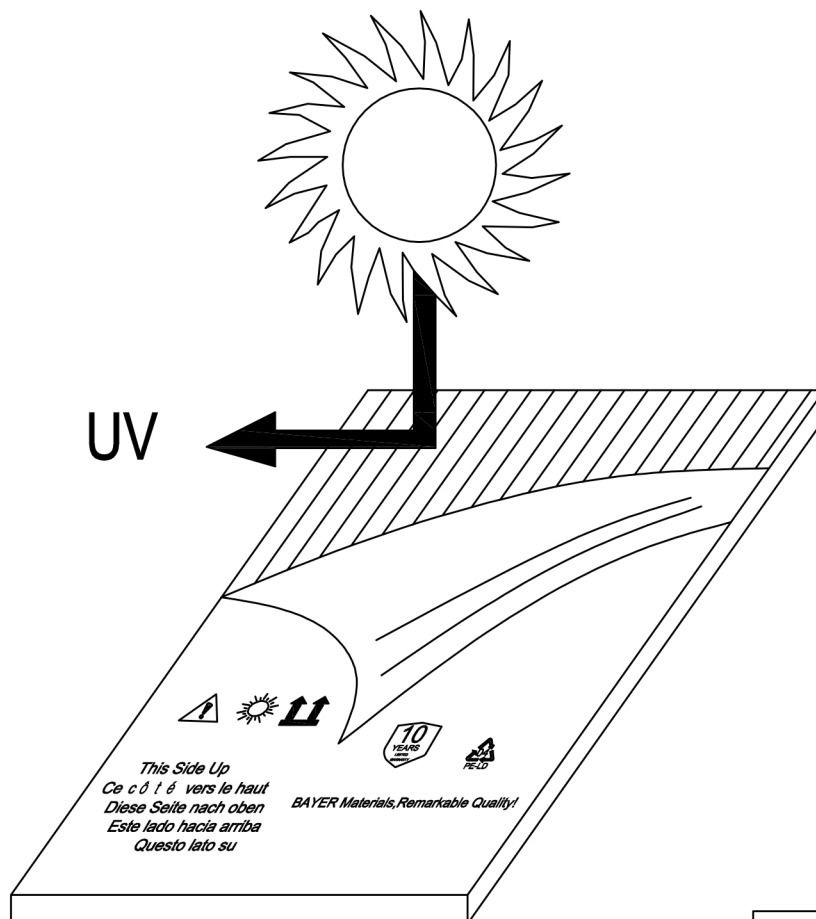


Ba-D23a



x5

16

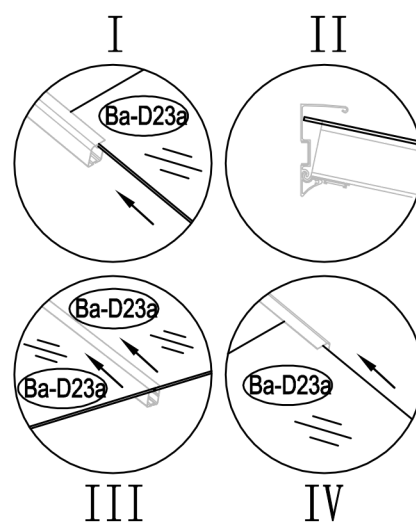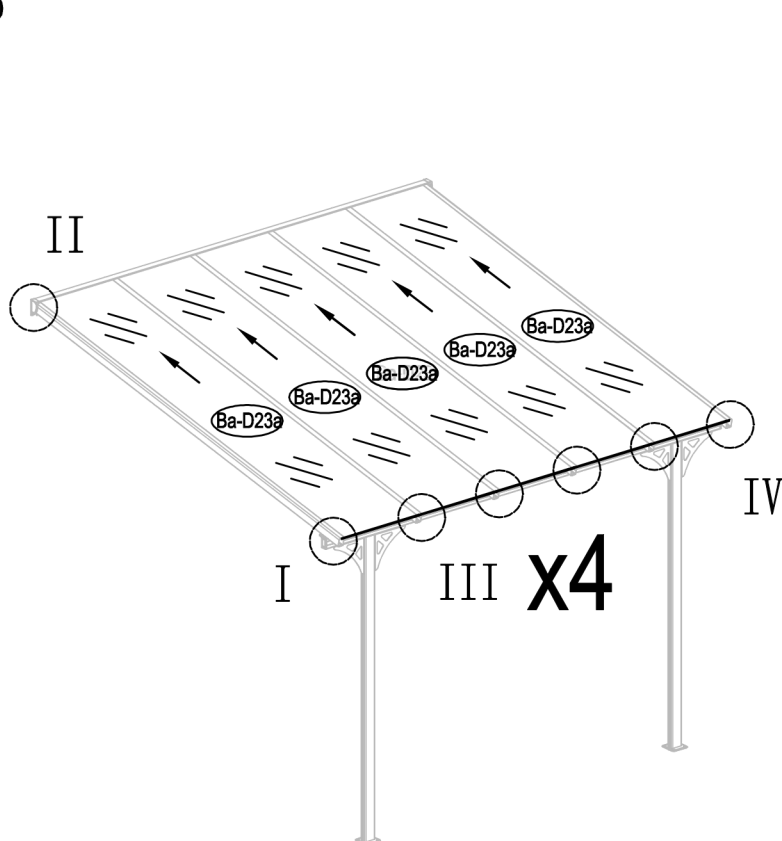



Ba-D23a



x5





17

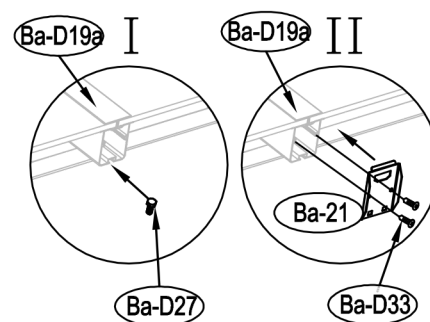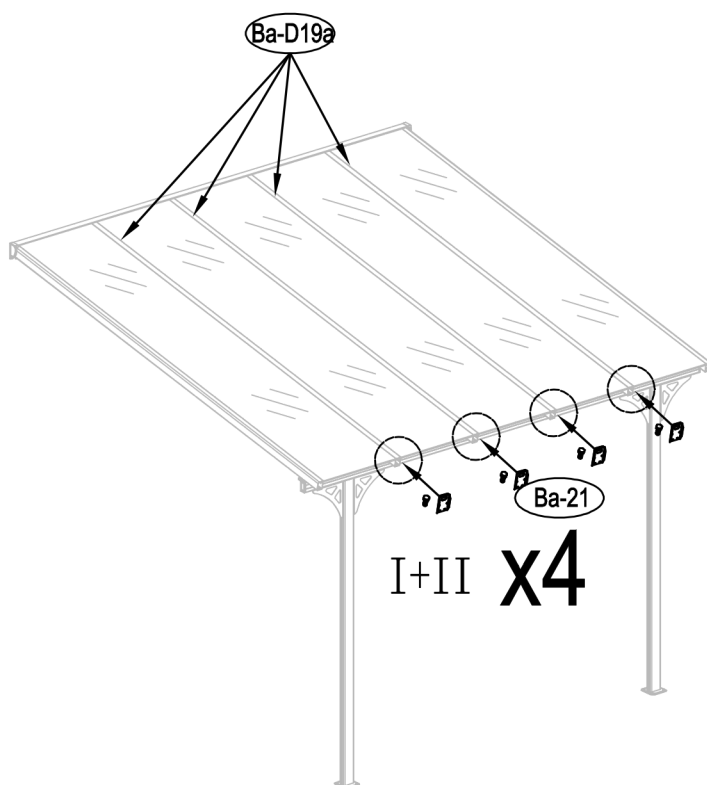

Ba-21		x4
Ba-D27		x4
Ba-D33		x8



18

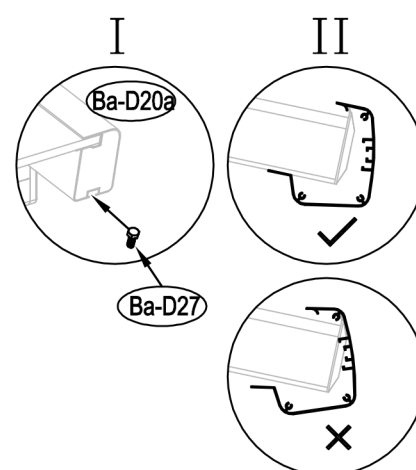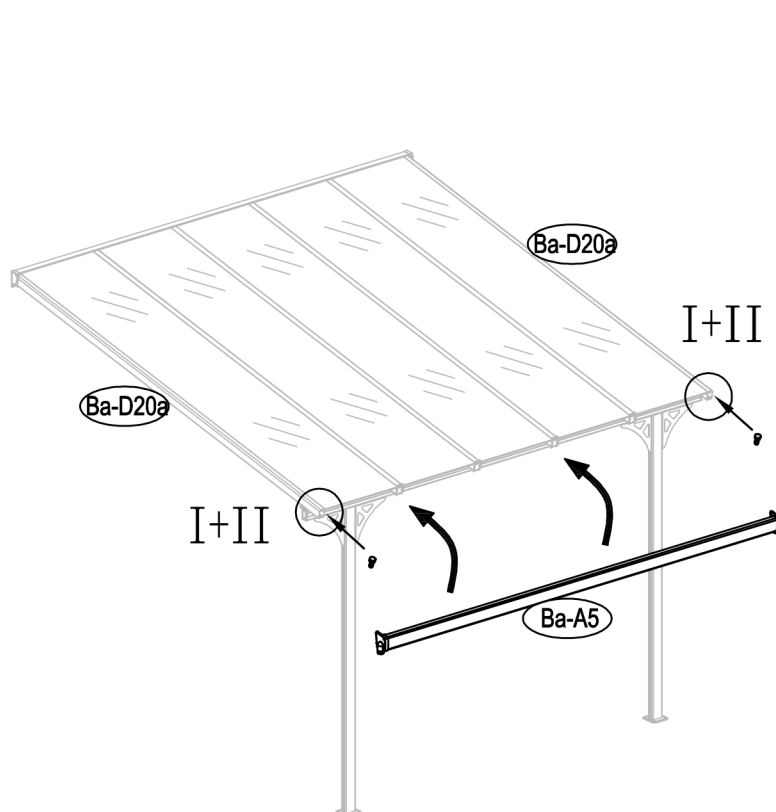

Ba-D27		x2
--------	---	----




19

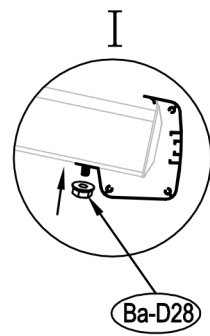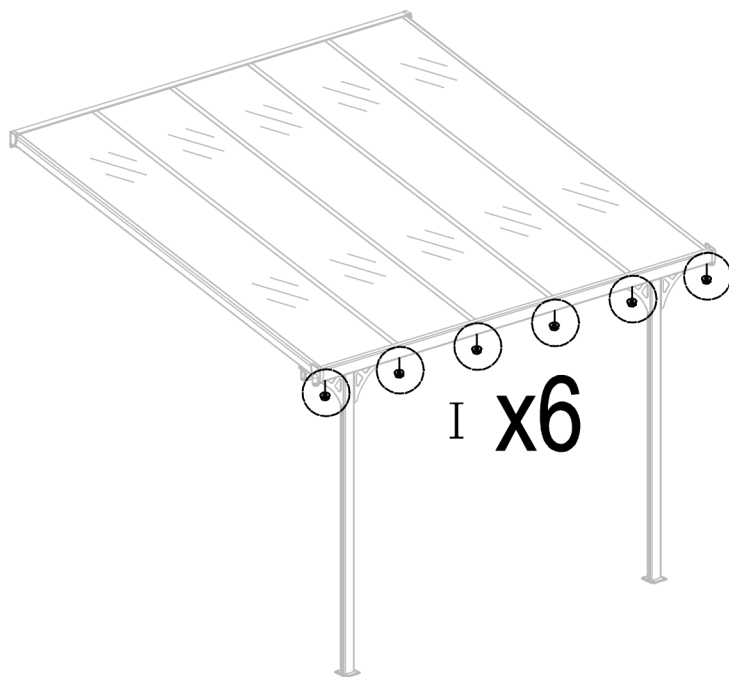

Ba-D28		x6
--------	--	----


20

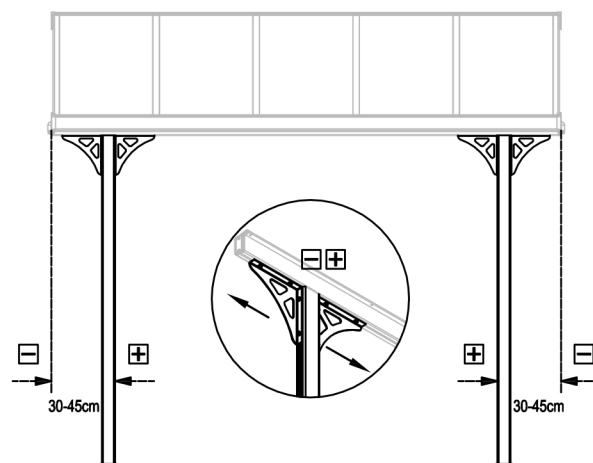



10



21

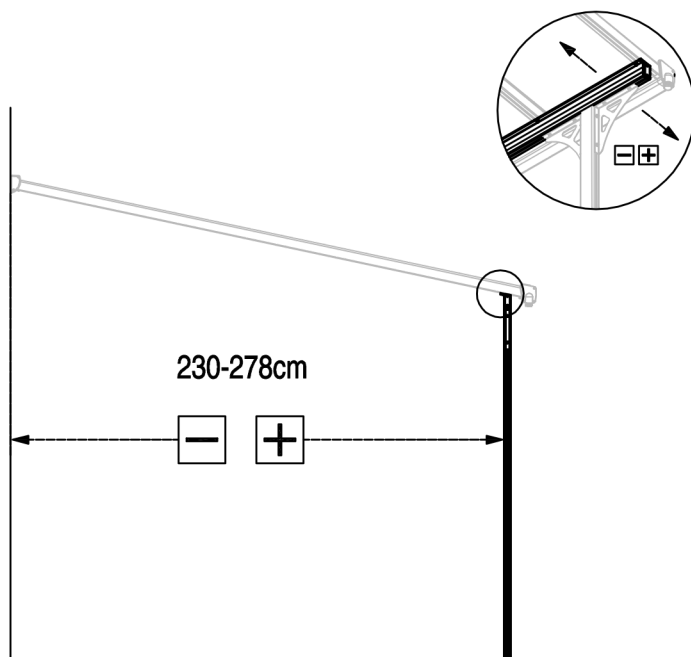

22

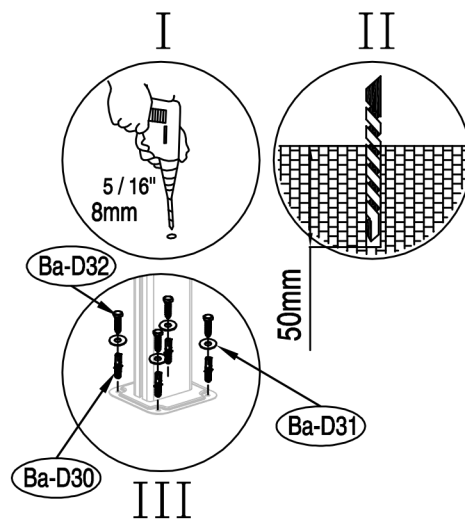
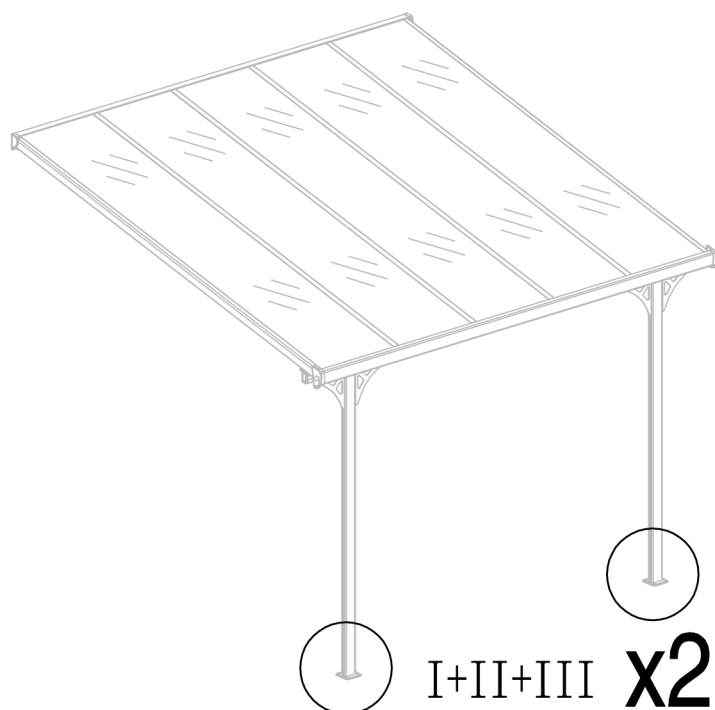


Ba-D30		x8
Ba-D31		x8
Ba-D32		x8

11



23

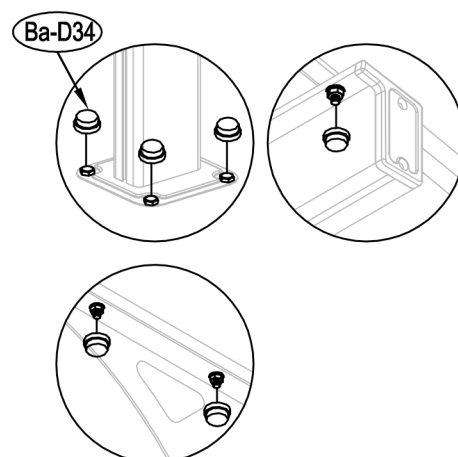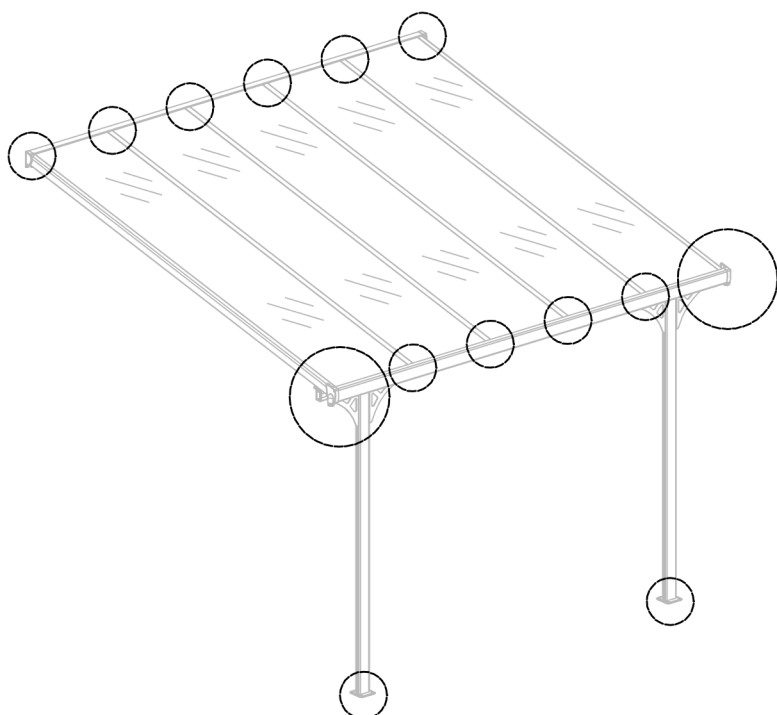

Ba-D34		x42
--------	---	-----

